


Tips for use Quooker CUBE

Look after me well!

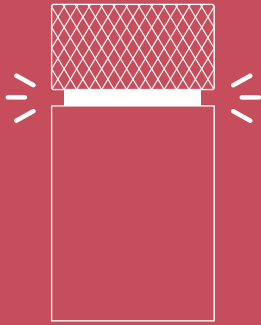

Filtered, chilled water

LED ring: solid blue
Push - wait - turn



Filtered, chilled & sparkling water

LED ring: flashing blue
Push - turn



First use

Before first using flush filtered and sparkling water through twice for one minute each time (the tap switches off automatically after one minute). The water in the CUBE takes approximately 40 minutes to cool down after installation, depending on the incoming mains water temperature.



Settings

You can adjust the settings on the display. Navigate through the menu with the left and right arrow keys and confirm your selection with the middle button. You can:

- Change the language
- Set the effervescence level of the water
- View the status of the CO₂ cylinder



Daily use

After you have dispensed sparkling water, there will be a short overrun of filtered water, in order to rinse any sparkling residue from the tap.



Replacing the CO₂-cylinder

After approximately 60 litres of sparkling water has been dispensed, the water flow will become weaker and there will be less carbon dioxide in the water. The CO₂ cylinder then needs to be replaced. When the CO₂ is completely empty, no more water comes out of the tap when you try to dispense sparkling water.

You can order a set of four new CO₂ cylinders using your account at quooker.co.uk. Instructions are printed on the cylinders, explaining how you can easily replace them yourself. After you have replaced the cylinder, you can reset the CO₂ counter using the touchscreen display on the CUBE.



Returning the CO₂ cylinders

The used CO₂ cylinders can be returned to Quooker free of charge. The cylinders are loan cylinders and remain the property of Quooker. If the used cylinders are not returned within 14 days of receipt of the new cylinders, Quooker is entitled to invoice the user for the costs of the cylinders that have not been returned. An unreturned CO₂ cylinder costs £10. For quality and safety reasons, the cylinders are refilled by Quooker.

Replacing the filter

The CUBE is equipped with an Active Carbon and Hollow Fibre filter. The Active Carbon filter guarantees better water quality because it reduces unpleasant tastes and odours. The Hollow Fibre filter purifies the incoming water of any bacteria that it may still contain. It also removes sand particles and suspended dust from the water. The filter lasts for 12 months or 3,500 litres. The CUBE will beep when the filter needs to be replaced. This signal can be snoozed for 72 hours using the snooze button on the display. During this time, you can order a new filter set from quooker.co.uk.



Holiday

If you go on holiday for longer than two weeks, it is cheaper to switch off your CUBE. You use the display to do this. When you return home, it is important to flush both sparkling & filtered water in the same way as specified under the section 'First use'.



Maintenance

Quooker recommends that you clean the CUBE fan once a year with a brush or vacuum cleaner.

Register your Quooker CUBE

Quooker products come with a two-year warranty. Scan the QR code below or go to <http://quooker.co.uk/register> to register your CUBE. This enables us to help you faster if you have any questions.

Service

If you still have questions after reading this guide, please contact us using the Service Request Form at quooker.co.uk/request or call 0161 768 5900.



Serial number Quooker CUBE

Write down the serial number of your CUBE here. The number is displayed on the front of the CUBE.

